


# Mountain Top Roll

## Spare parts

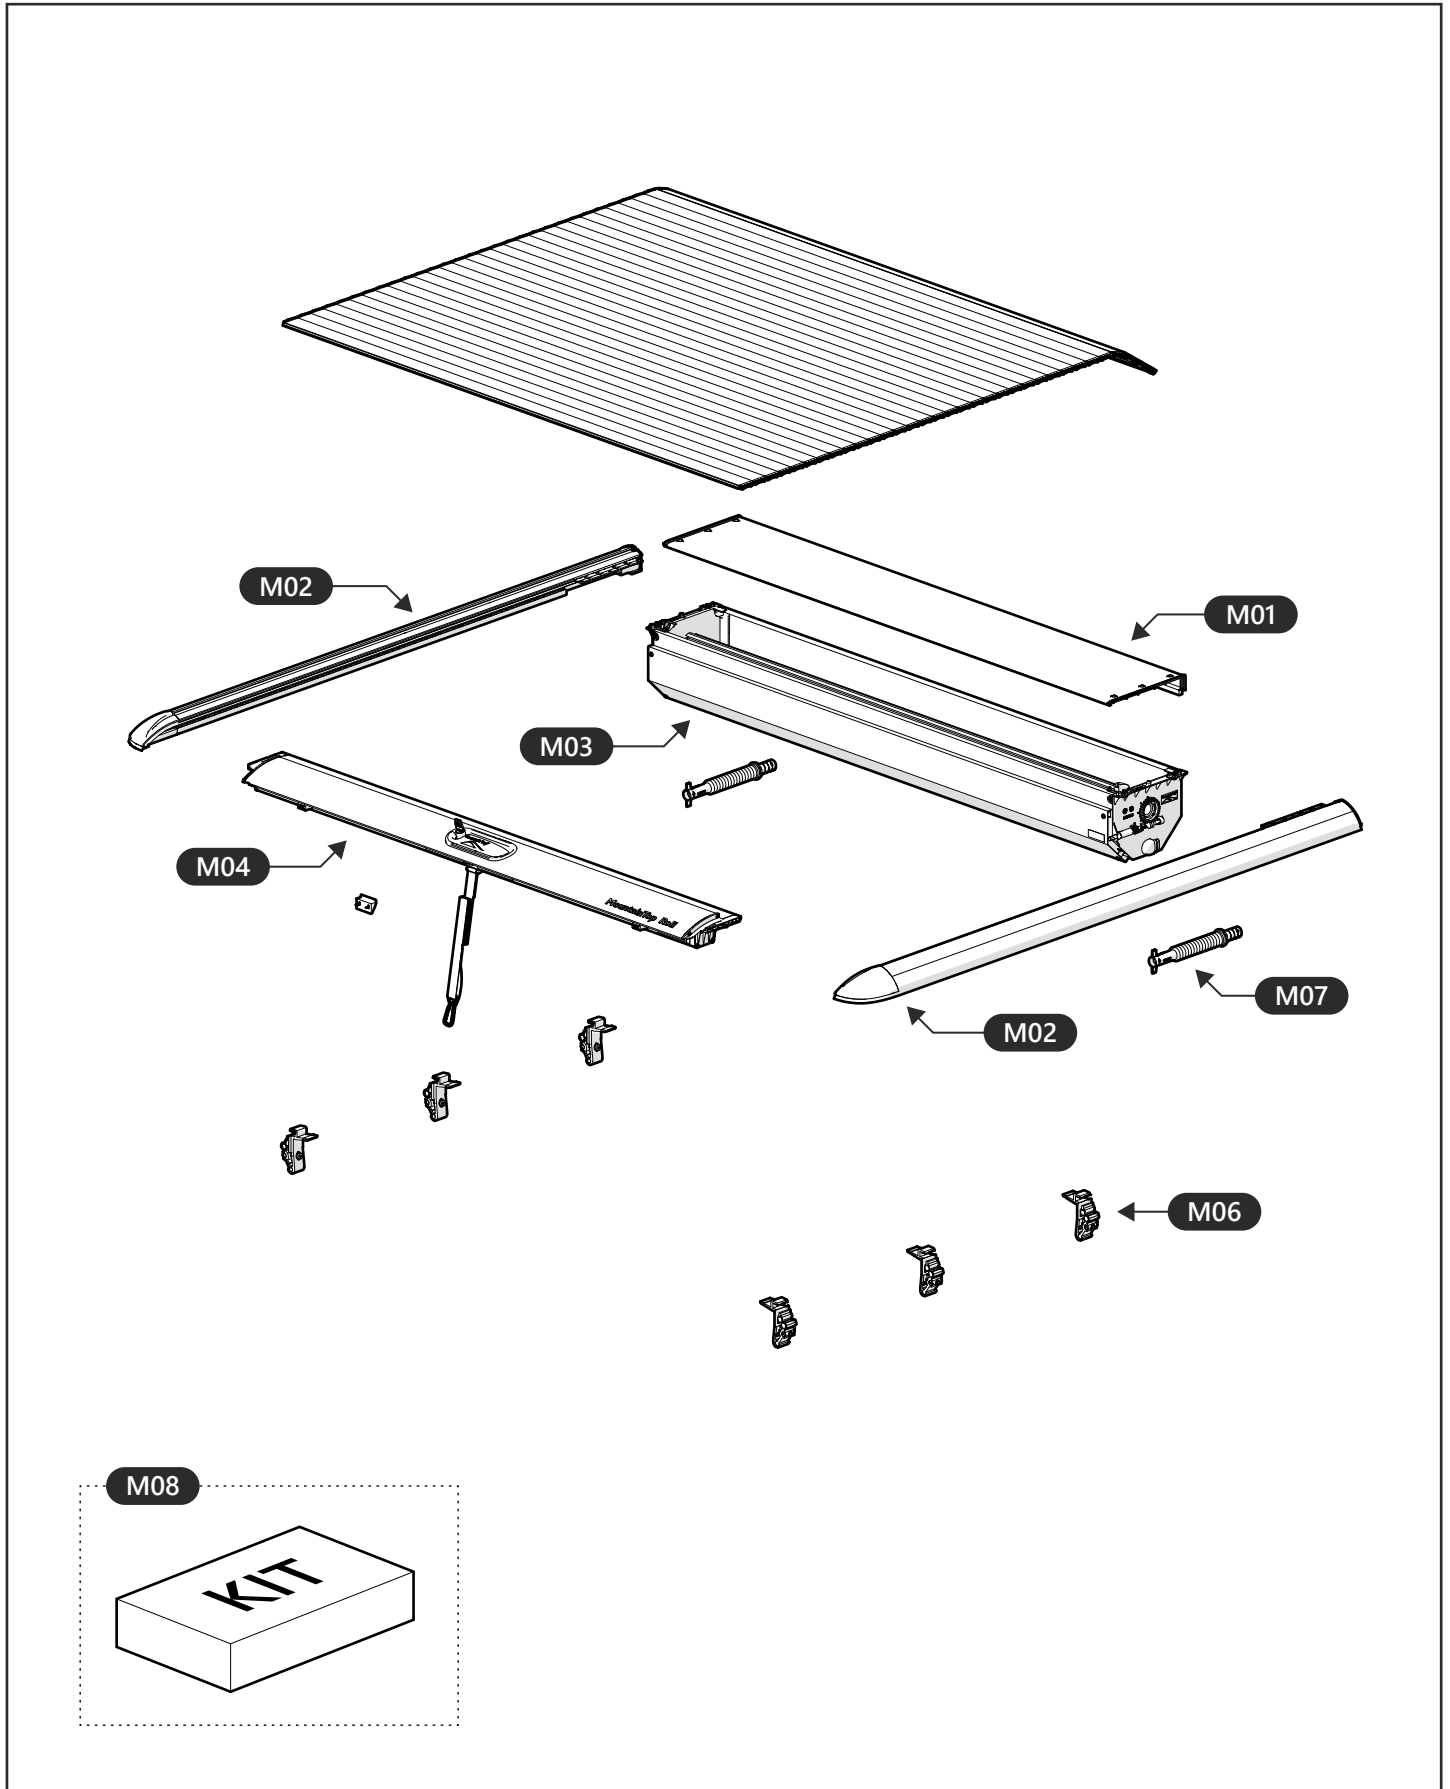


# Mountain Top Roll


## Spare parts



M01

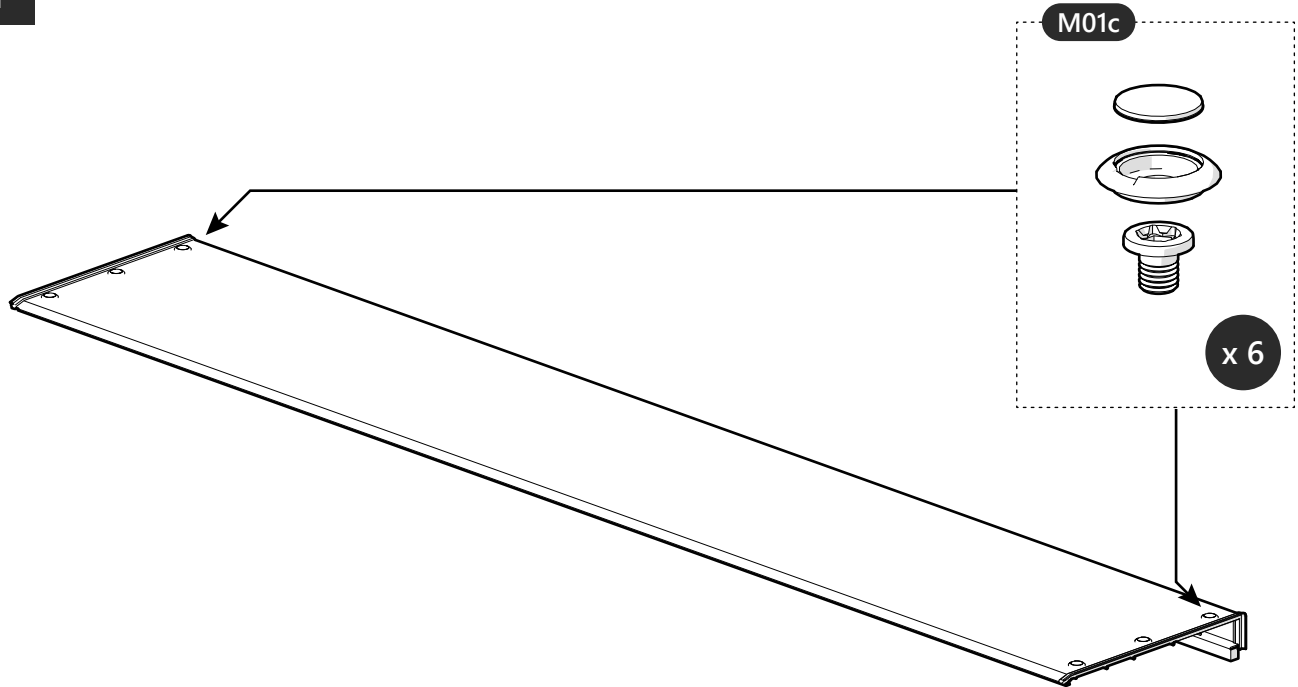

M02

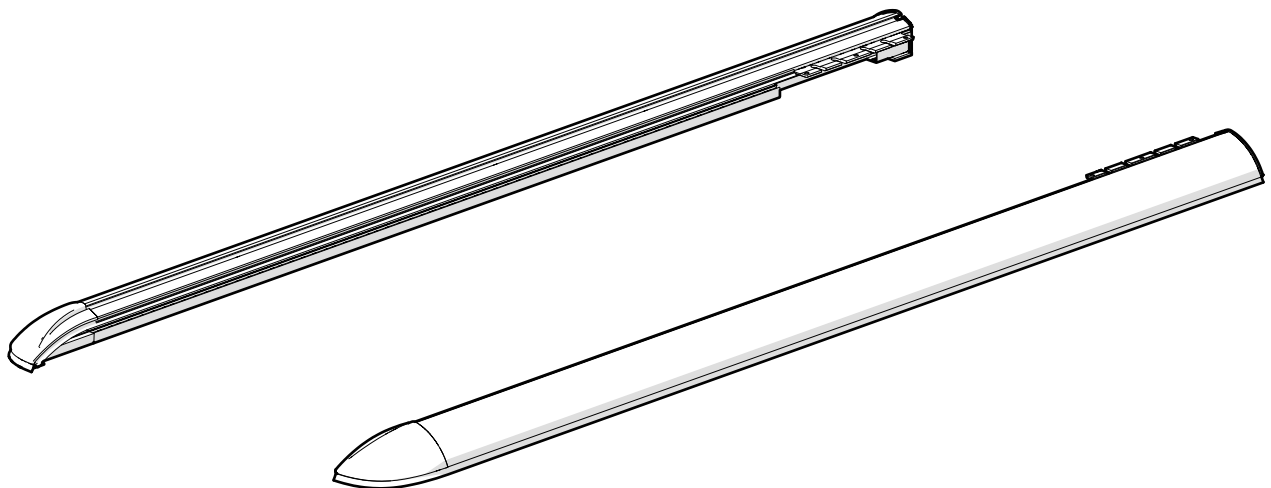


# Mountain Top Roll


## Spare parts




### M03

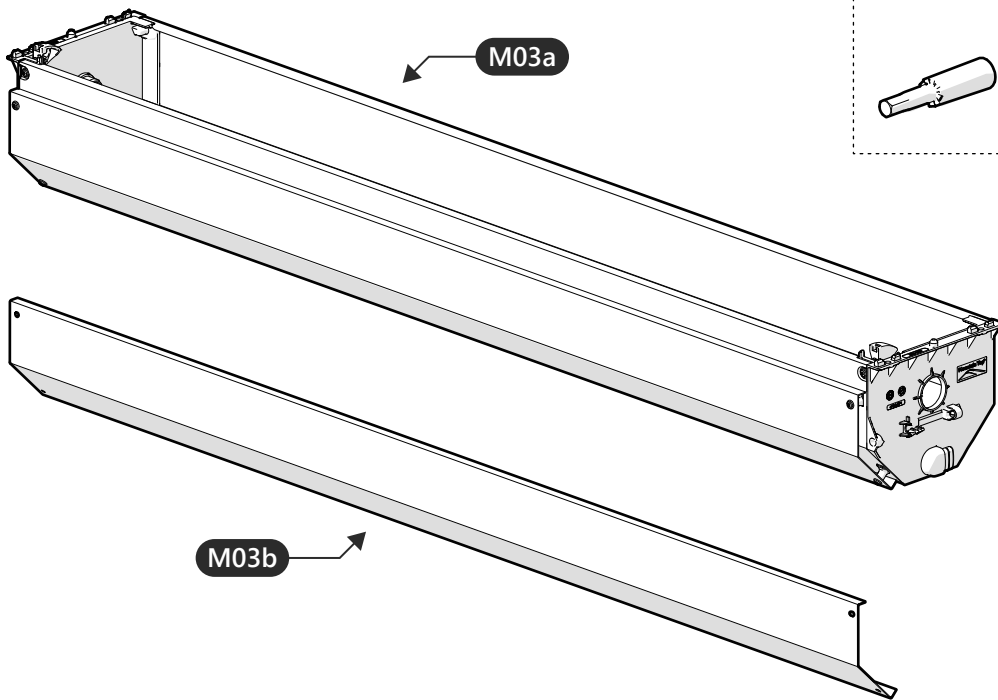

### M03e

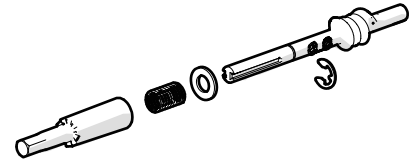


### M04

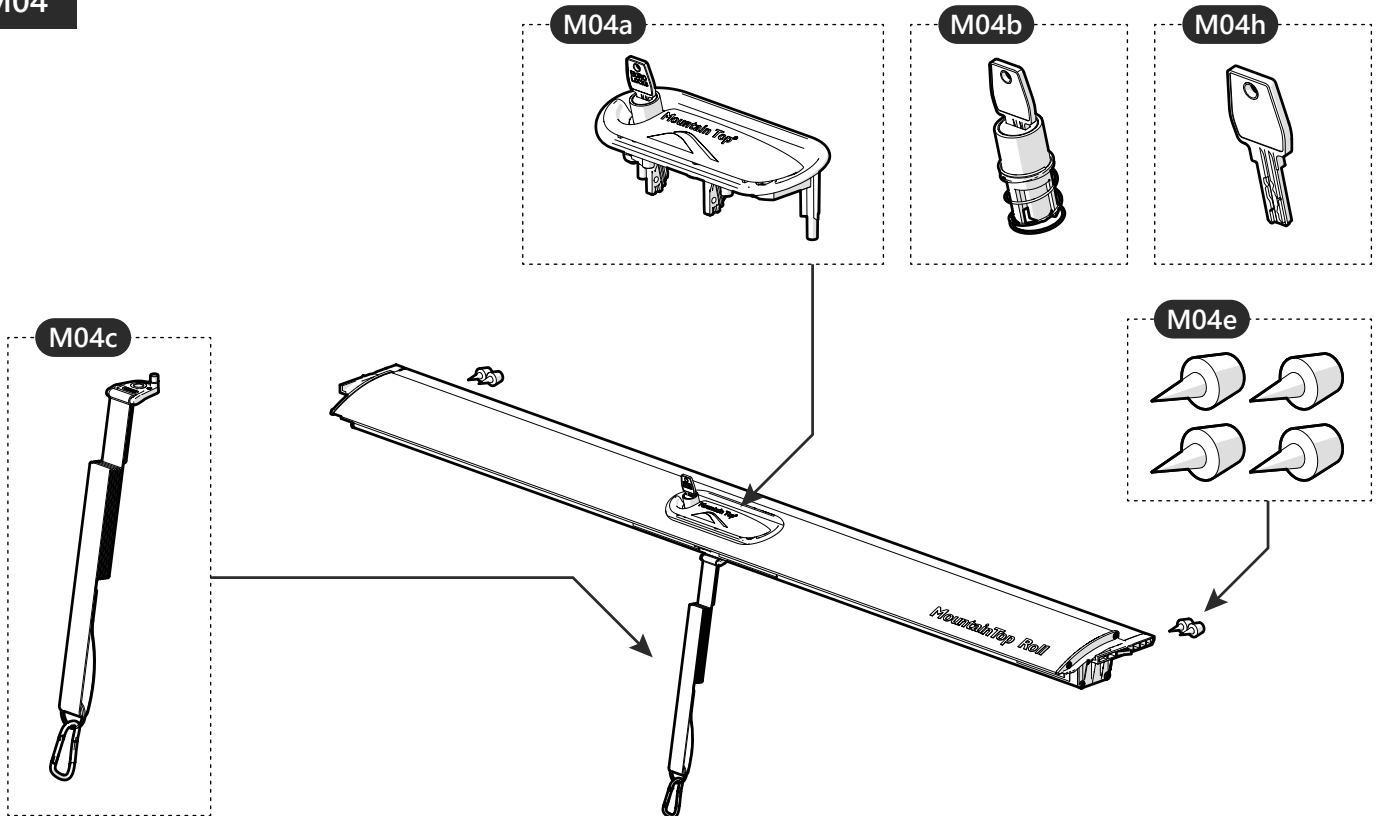





### M06

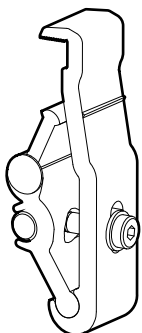


**M06c** x 1  
FORD

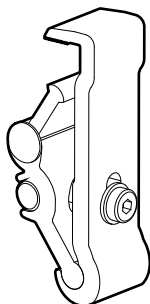


**M06d** x 1  
TOYOTA  
ISUZU

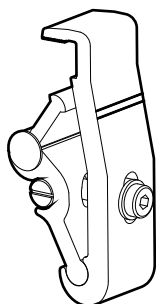


**M06e** x 1  
VOLKSWAGEN

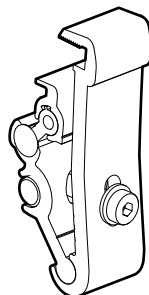

**M06f** x 1  
NISSAN

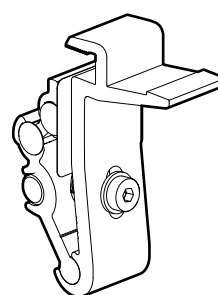


**M06g** x 1  
TOYOTA  
/ Renault  
/ Mercedes

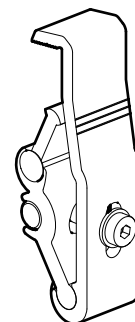


**M06h** x 1  
MITSUBISHI  
/ Fiat

### M07


**M07e**

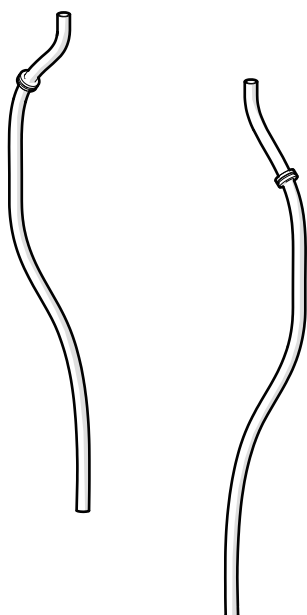

**M07c**

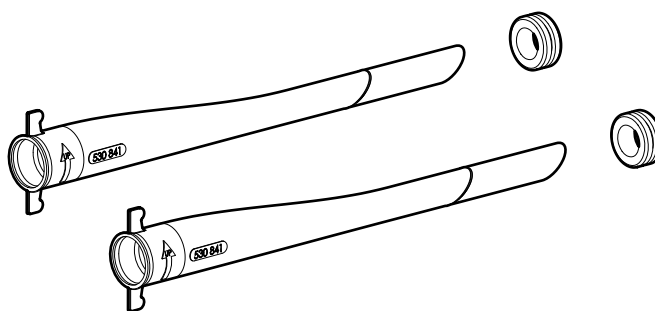

**M07d**

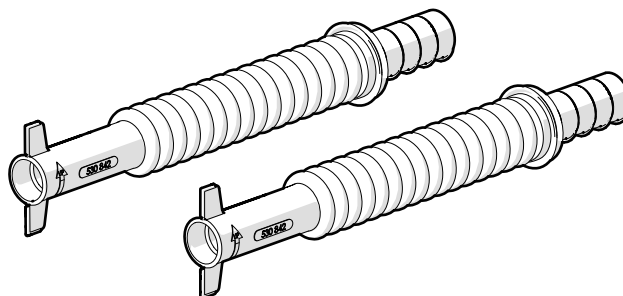


# Mountain Top Roll

## Spare parts


M08



x 6

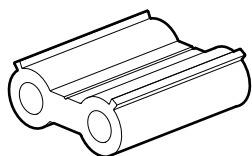


x 6

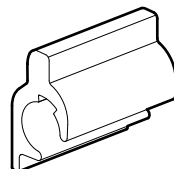


x 6



x 6

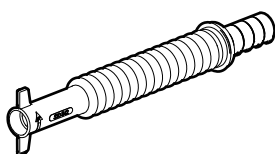

x 2




x 12 / x 24




x 6




x 6

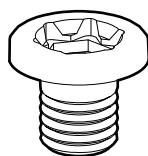


x 6

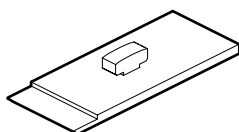


x 2

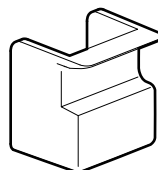


x 2




x 1

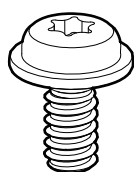

x 4

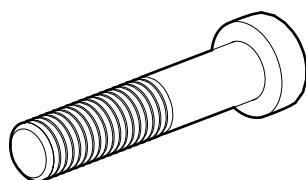


x 6

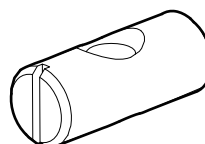


x 6



x 6

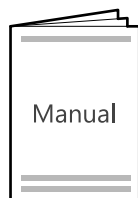

x 1

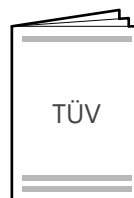

x 1



The contents of the kit may vary for different car models