


Mountain Top 2 / Style


Spare parts

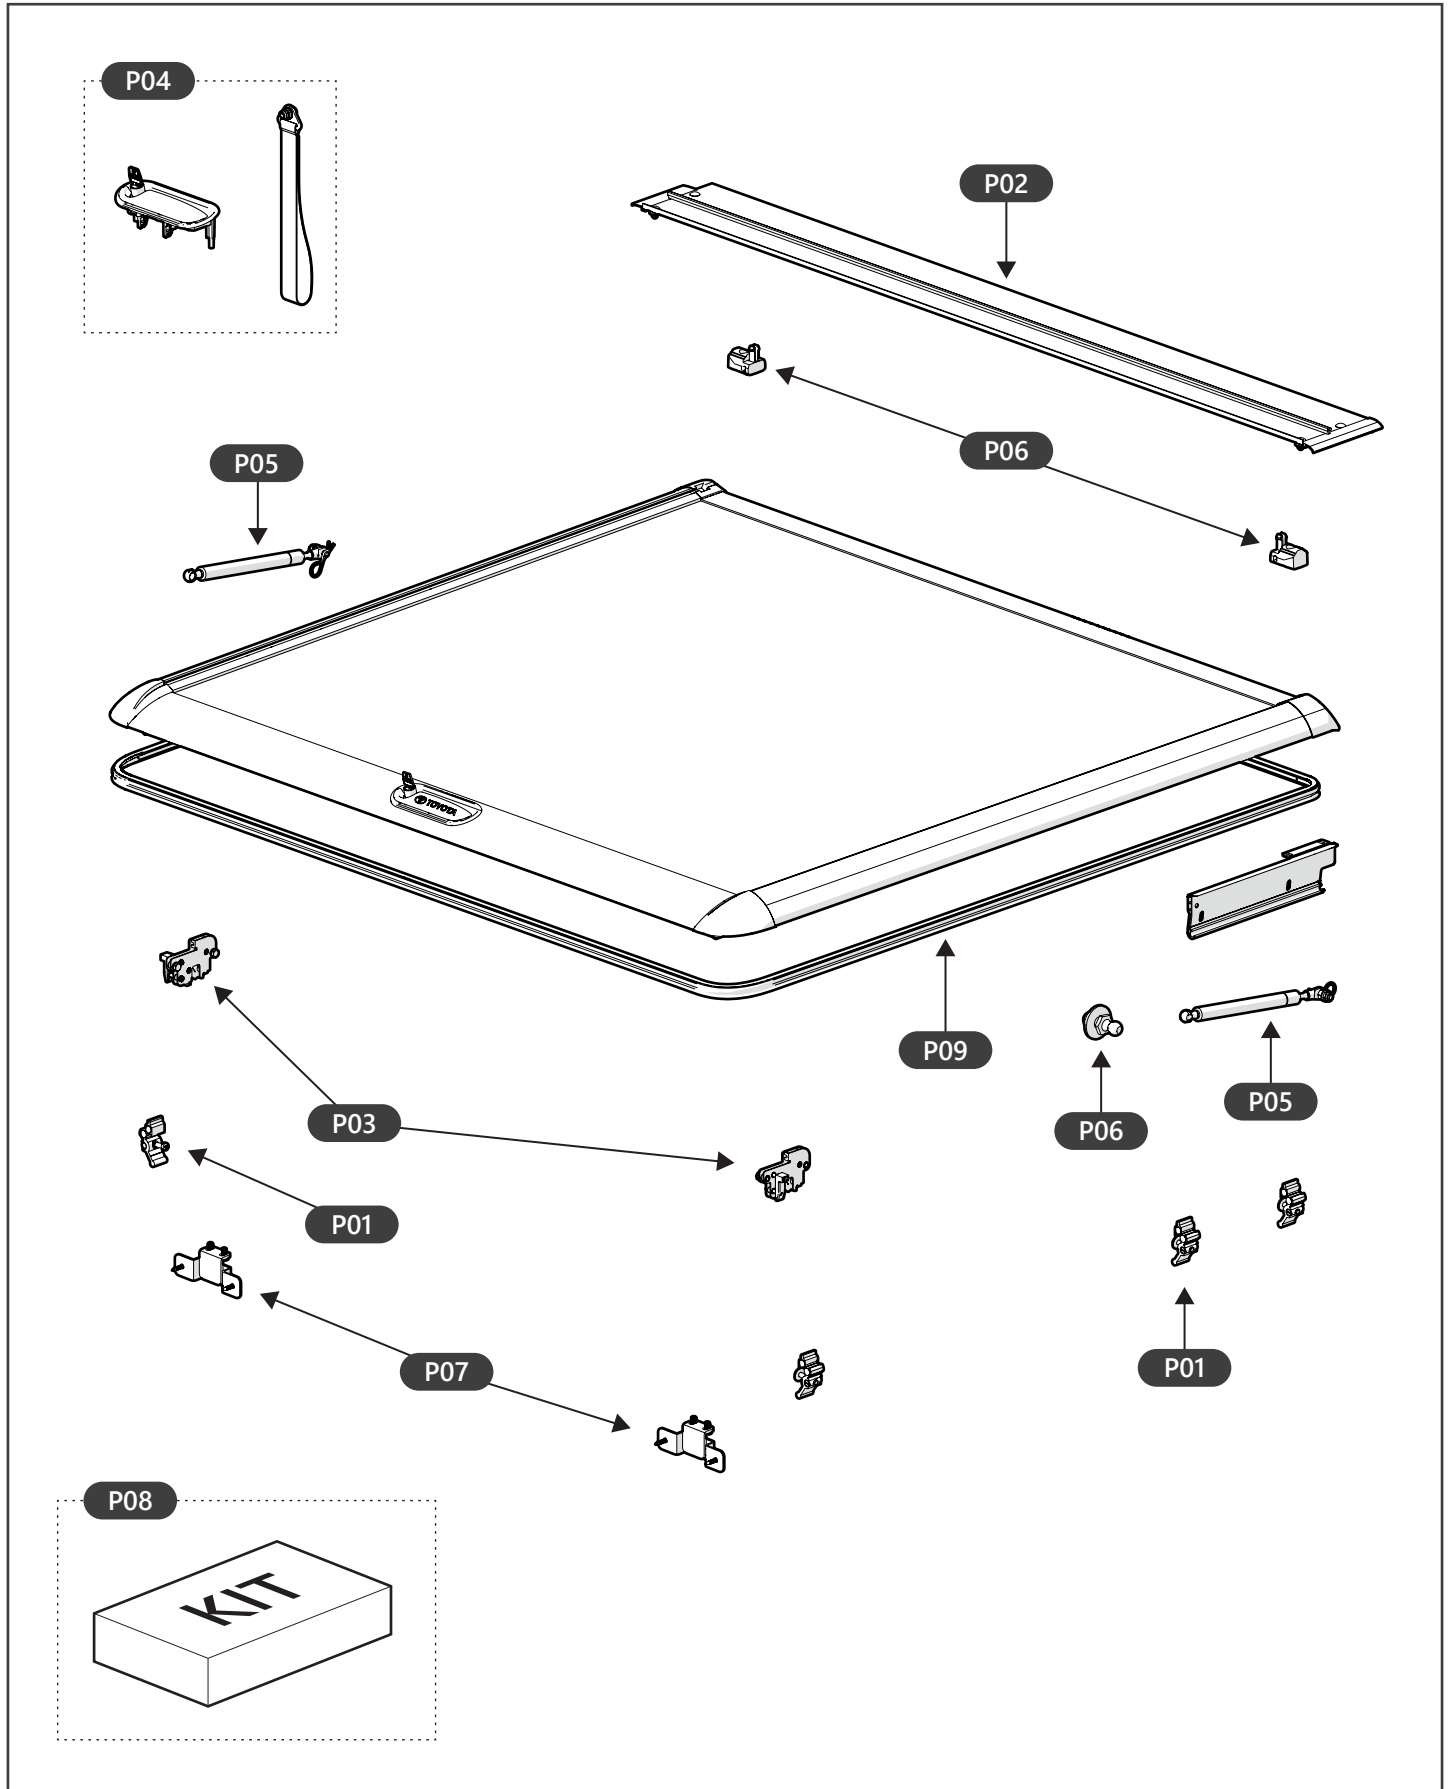


Mountain Top 2

Spare parts


P01

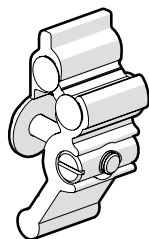


P01aF (front) x 1
P01aR (rear) x 1
TOYOTA (Original)

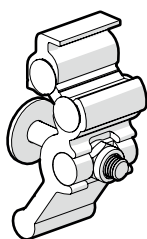


P01b x 1
NISSAN
/ Mercedes
/ Renault

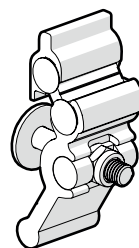


P01c x 1
ISUZU

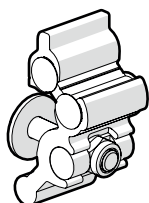


P01d x 1
MITSUBISHI
/ Fiat

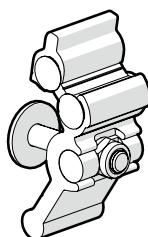

P01e x 1
VOLKSWAGEN

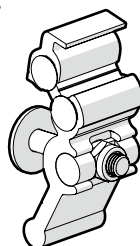


P01f x 1
FORD

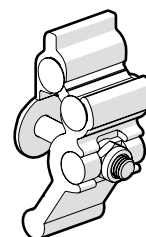


P01gF (front) x 1
P01gR (rear) x 1
TOYOTA (Aftermarket)

P02

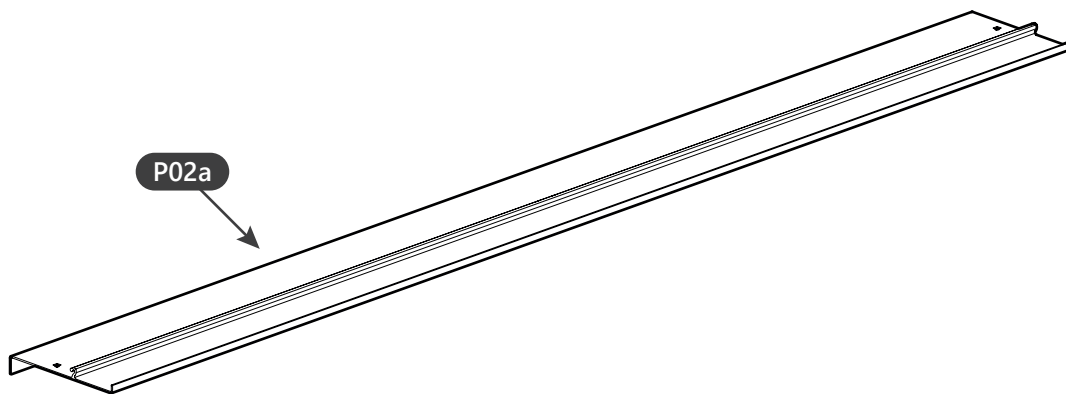


P02a

P02b

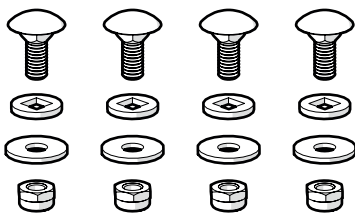

P02c

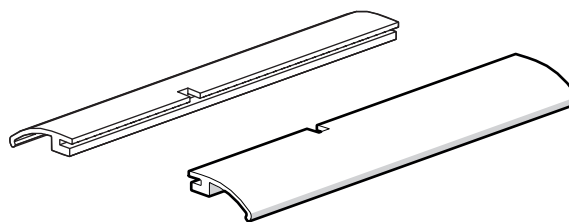



P03

P03a

FORD

P03b

MITSUBISHI / Fiat

P03c


TOYOTA / VW

P03d


NISSAN / Mercedes / Renault

P03e

ISUZU

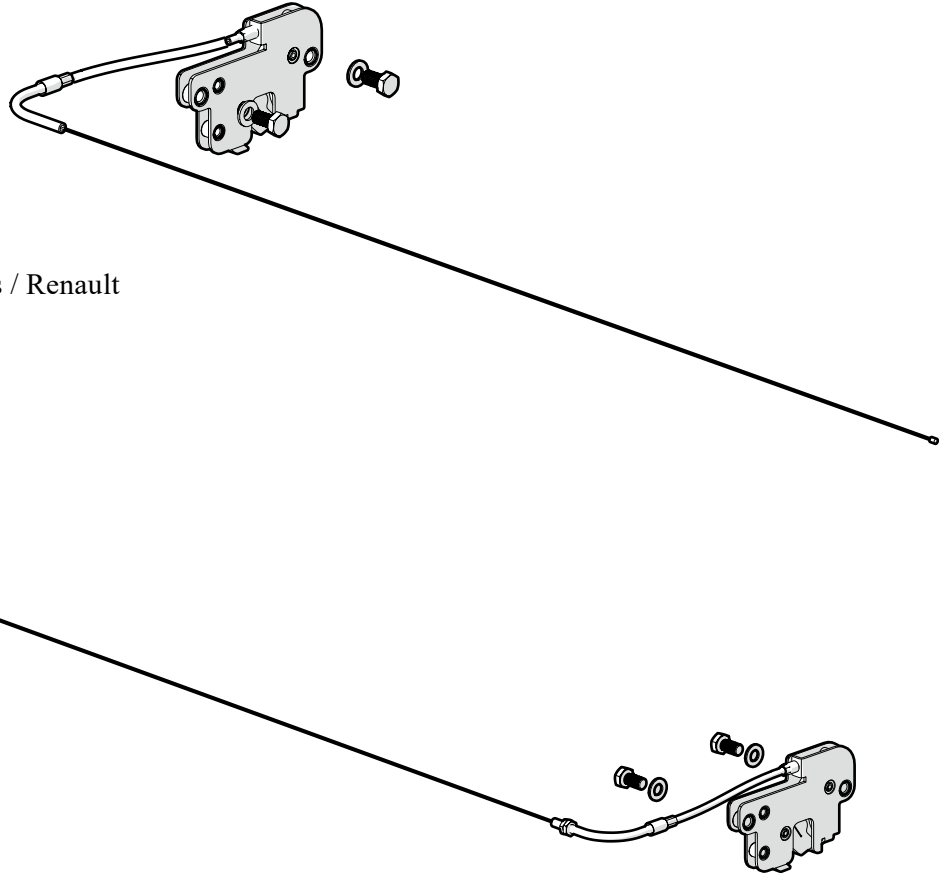

P03f

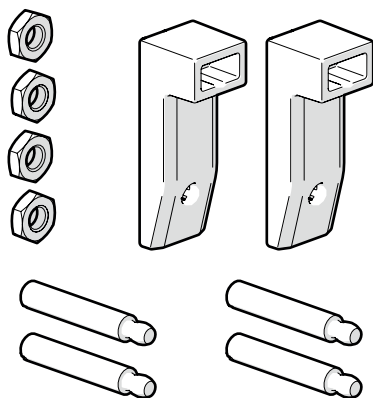


Mountain Top 2


Spare parts



P04

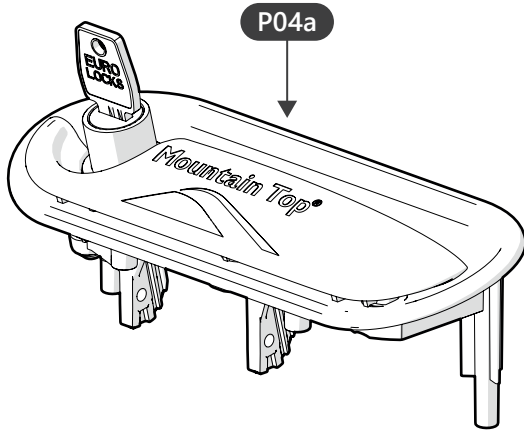


M04b

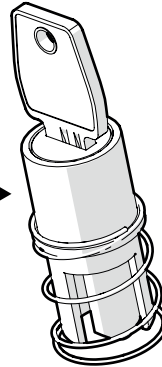


M04h




P04f

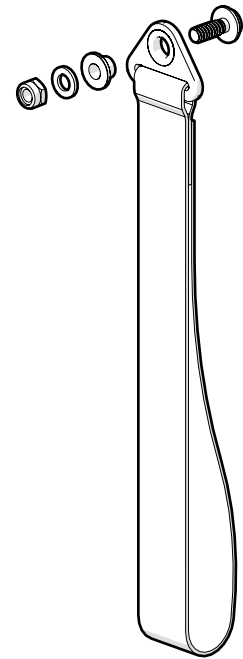

P05

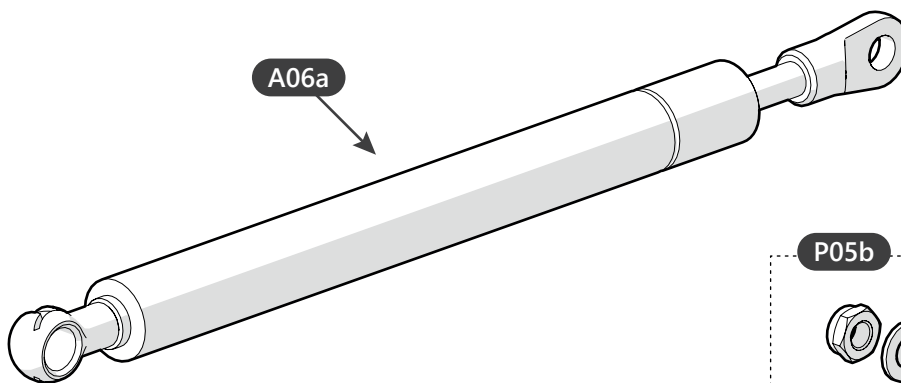

P05b

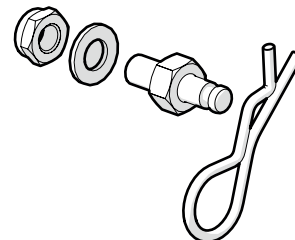


Mountain Top 2


Spare parts

P06

P06a

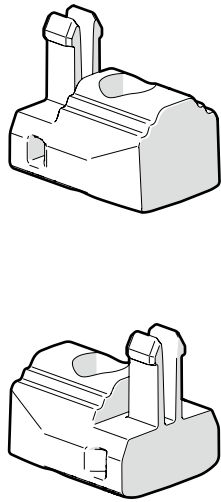


P06b

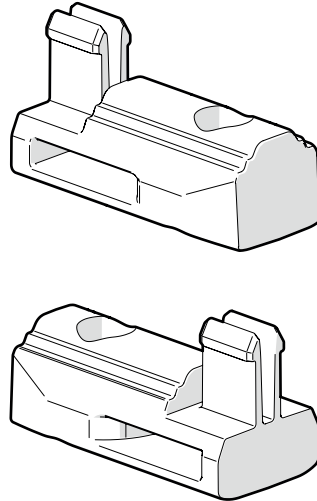


Fiat (Extended Cab) /
MITSUBISHI (CLUB CAB)

P06c

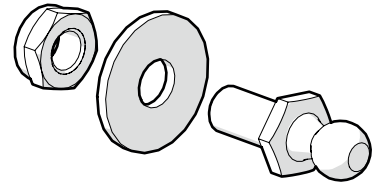

P07




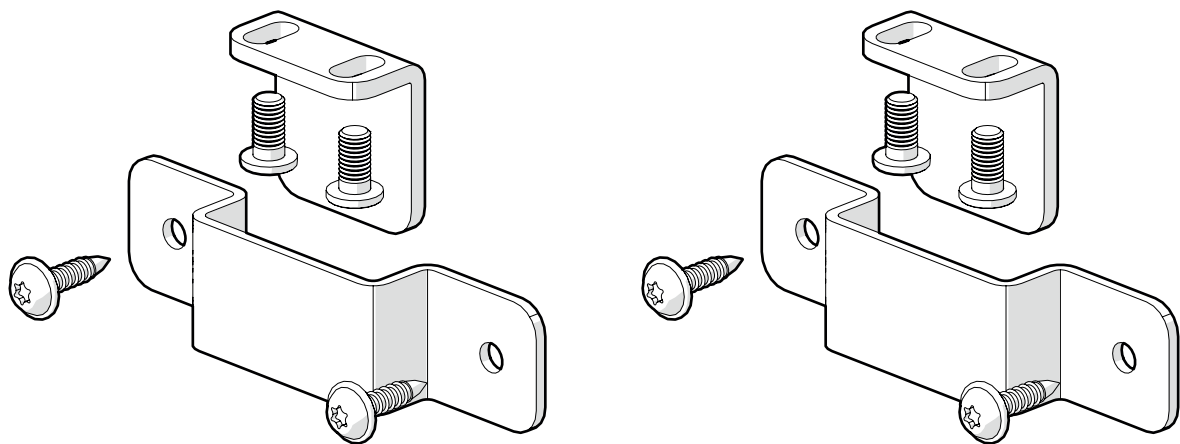


Mountain Top 2


Spare parts




P08

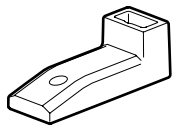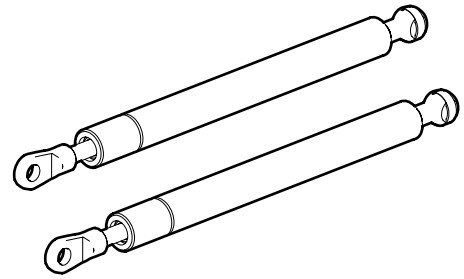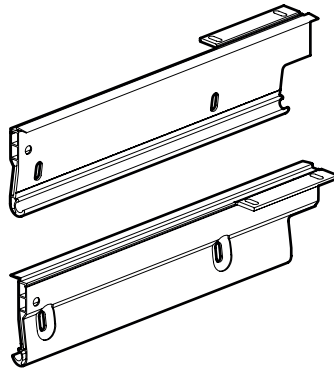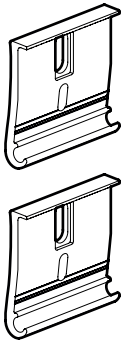


x 2




x 4



x 4




x 1




x 2



x 6

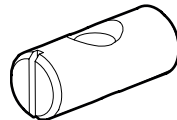


x 6




x 6




x 2

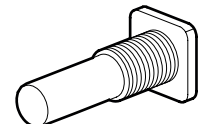


x 2

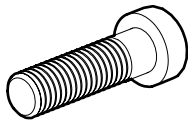


x 6

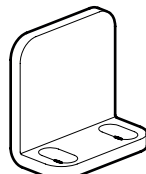


x 2




x 4




x 4

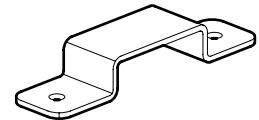


x 2




x 4

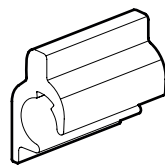


x 6

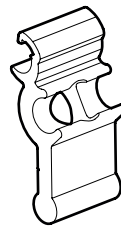

x 6

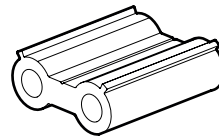


x 6




x 24




x 2




x 2



x 8



x 2

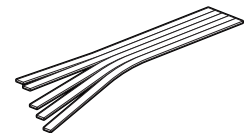

5 x 1m



The contents of the kit may vary for different car models

Mountain Top 2

Spare parts

P09

